BOOMBOT REX

USER GUIDE

Join the party on Instagram! Check out **swagonomics.boombotix.com** to see how other Boombot REX owners are living with their ultraportable speakers in the wild.

Share some of your own photos by hastagging #boombotix, and take part in the Boombot movement!

Table of Contents

What's Included	4
Accessories	5
Features	6
Controls	7
Bluetooth Pairing & Line-In	8
Soundhub & Daisy Chain	9
Battery & Assembly	10
Warranty	11
	12

What's Included

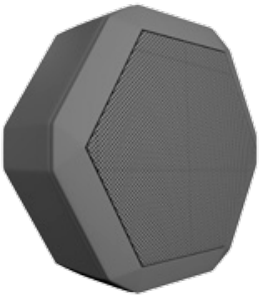

Boombot REX speaker

Auxiliary audio cable

Micro USB charging cable

2 in. Boombotix vinyl sticker

Accessories

Replacement Grillkits

Wall Charger Kit

Replacement Cable Sets

Bike Handlebar Mount

Features

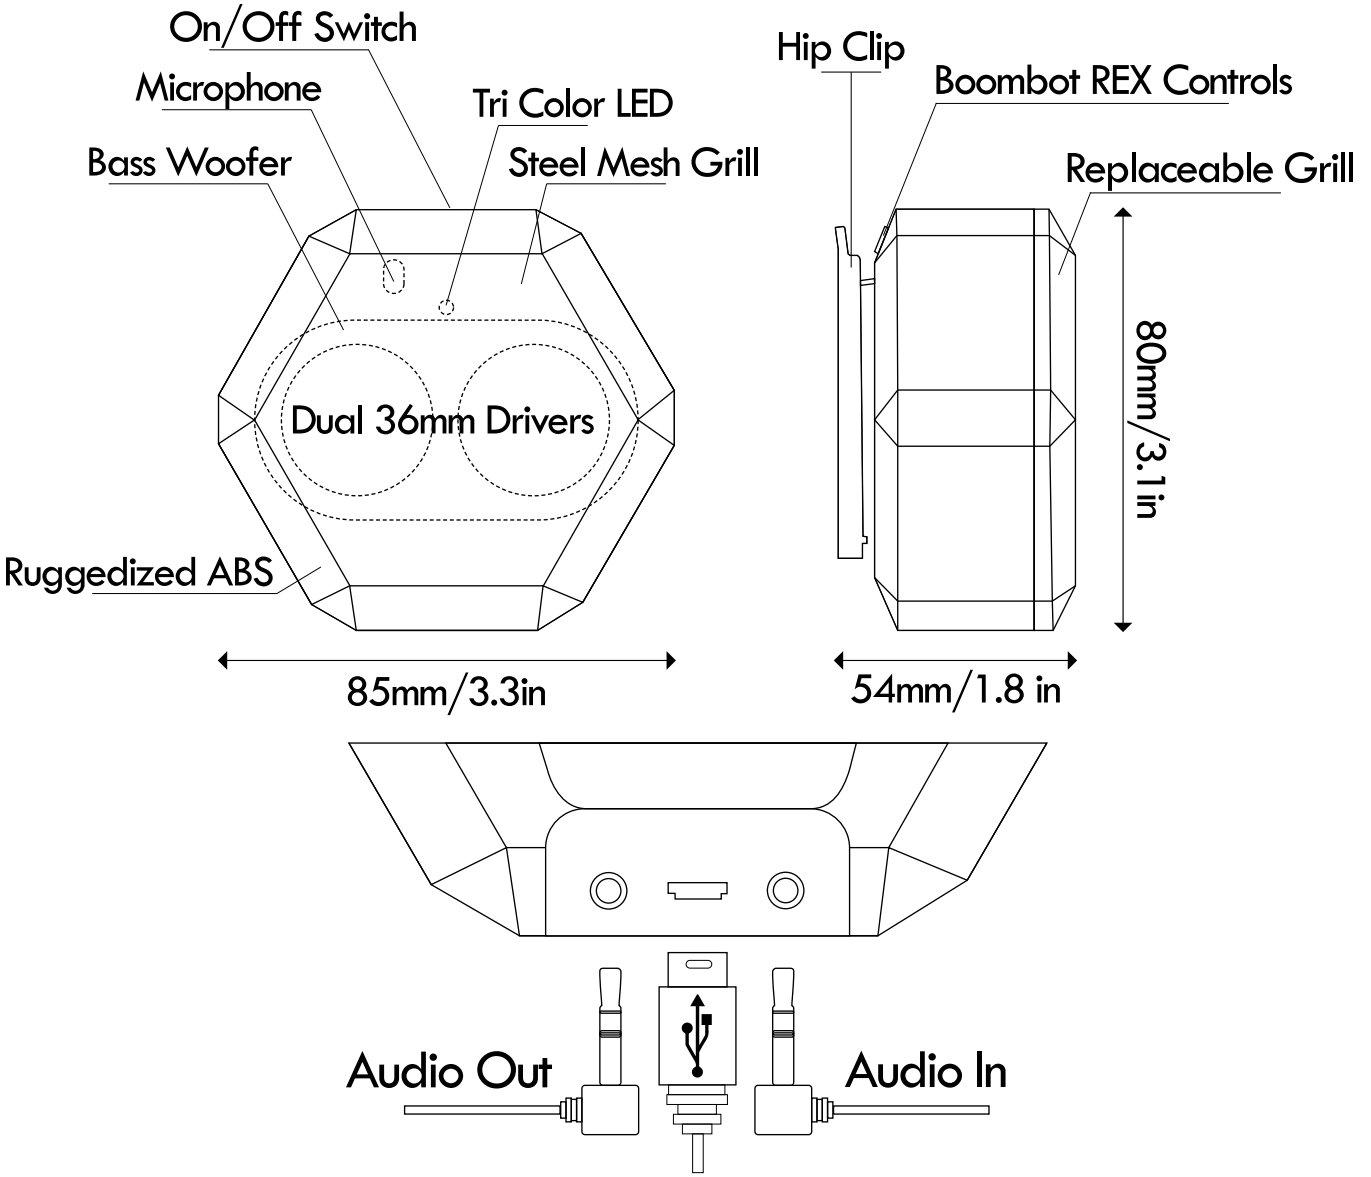
On/Off Switch
Microphone
Tri Color LED
Bass Woofer
Steel Mesh Grill
Dual 36mm Drivers
Ruggedized ABS
85mm/3.3in
Hip Clip
Boombot REX Controls
Replaceable Grill
80mm/3.1in
54mm/1.8 in
Audio Out
Audio In

Controls

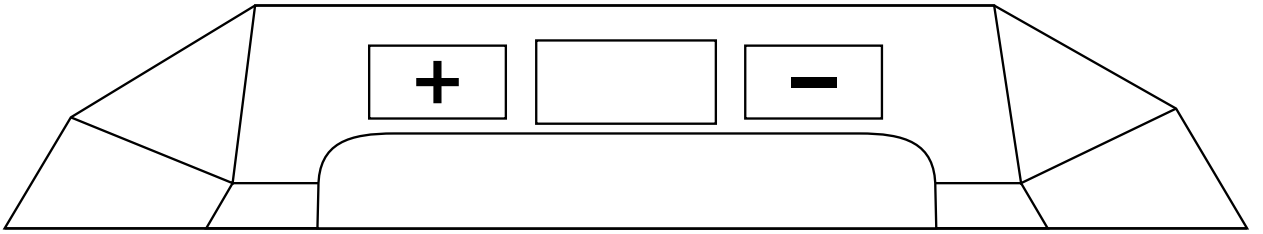

On/Off Switch (Located on top)

⬢ indicates ON position

⬡ indicates OFF position

Center Button

- Tap to play/pause current track
- Tap to answer/end phone call
- Double tap to advance track
- Hold to activate voice assistant **(SIRI)**

Playback Buttons (+/-)

- Tap or hold for volume control
- Tap either (+) or (-) to deny incoming call

Bluetooth Pairing

1) Boombot REX will be discoverable immediately after power on, indicated by a blinking blue LED.
2) Open your device's Bluetooth settings and choose Boombot REX on list of devices.
3) To pair, simply select the device. Pairing will occur automatically.
4) When successfully paired, LED will be solid blue.

Line-In

To connect to Boombot REX via direct line-in, connect the IN port of the Boombot REX to your device. Line-In device state is indicated by a solid green LED. To switch back into Bluetooth mode, simply remove the auxiliary cable from the rear of the device.

Soundhub

To use the Boombot REX as a Bluetooth reciever, connect any other speaker to the OUT port of the device with the auxiliary cable. The Boombot REX will replicate the stereo signal through the attached speaker. Music playback out of the Boombot REX will continue while in Soundhub mode.

Daisy Chain

To link multiple Boombot REX speakers in series, first pair (either via Bluetooth or Line-In) to your Boombot REX, which will serve as the master speaker in the series. Any Boombot REX speakers added to the sequence (by connecting the OUT port of a connected speaker in the series to the IN port of the additional speaker) will replicate the signal of the master speaker. Repeat as needed.

Battery

1. Use the included Micro USB cable to link Boombot REX to your personal computer or USB outlet. A full charge will take 2 hours.
2. When fully charged, LED will appear solid green. Battery life is appoximately 6 hours.
3. LED will blink red at <10% capacity.
4. On iOS devices, Boombot REX battery meter will be apparent in top menu bar.

Assembly

To remove the grill of the Boombot REX, twist 15° counterclockwise. To replace grill, place new grill slightly counterclockwise to speaker, flush with device, and twist 15° clockwise.

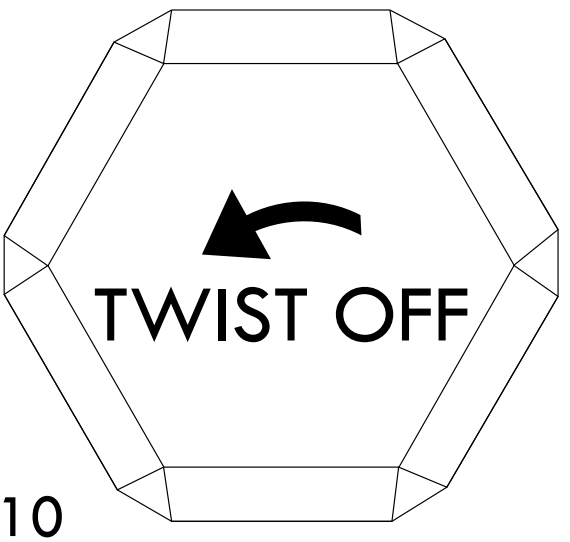

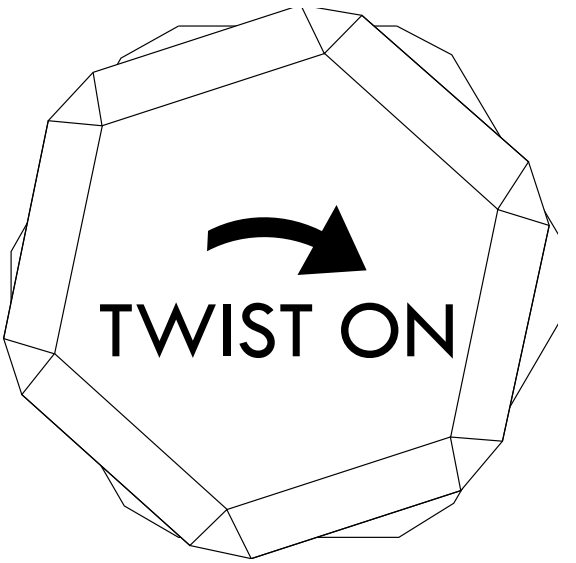

Warranty

Boombotix Inc. believes in delivering quality products meant to withstand the abuses of the active lifestyle. We back our products with a full one year (from date of purchase) manufacturer's warranty covering any workmanship or manufacturing defects. In addition, if your Boombot REX is unable to keep up with your active lifestyle, we will repair or replace your unit within one year of purchase. Pictures, video, and/or a good story are strongly encouraged.

For more information and to fill out a warranty claim, visit: **boombotix.com/warranty**

NO MATTER WHAT
ONE YEAR WARRANTY

great**SOUND**

modern**DESIGN**

tech**INNOVATION**

ULTRAportable

BOOMBOTIX

DESIGNED IN SAN FRANCISCO